


Kainpo

DOUBLE BRAKE INSTALLING MANUAL

Included in the package:

- (1.) Hex bolt M6 x 50 mm x 2
- (2.) Washer M6 x 2
- (3.) Nyloc nut M6 x 4

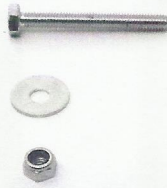

For assembly, you will need two 10mm spanners.


Attention! You might want to use a combination of a spanner and a ratchet wrench to speed things up.

The steps


1. On one side of the brake, match the tap under the return spring to the hole in the sled. See that the spring hook is over the runner as seen in the picture.
2. Push the hex bolt in to the hole.
3. Insert a washer and and tighten the nyloc nut, but not too tight to prevent free movement of the brake.
4. Repeat with the other side.
5. Finally set and tighten the second set set of nyloc nuts to ensure fixing will not loosen over time.
6. Remove the installation helping tape pieces.
7. Adjust the brake pedal position to your liking using the adjustment screw. Lock the setting by the tightening nut.
8. If you kick with spike shoes or metal crampons consider using rubber brake pedal protectors. They improve the braking comfort and are available as an accessory..
9. If necessary, new brake claws are also available.




8-9.

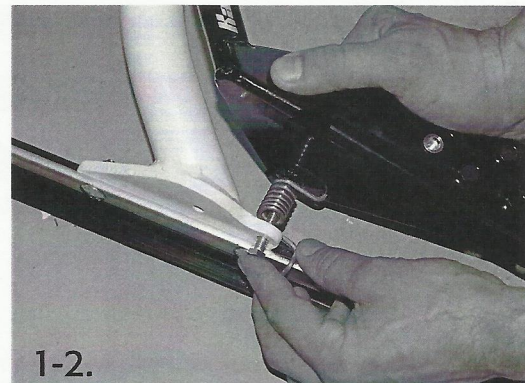


1-2.

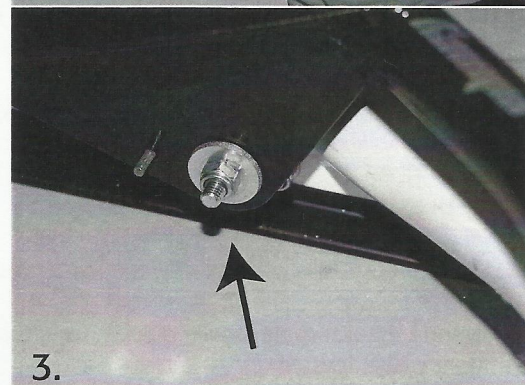

3.

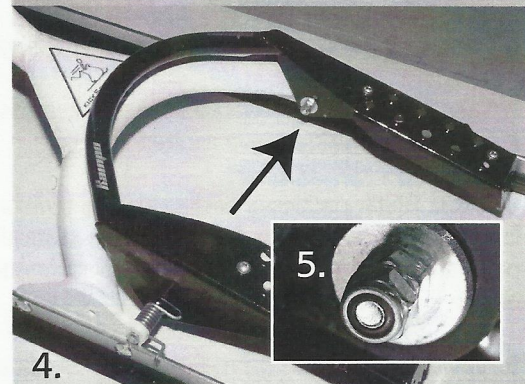

4.

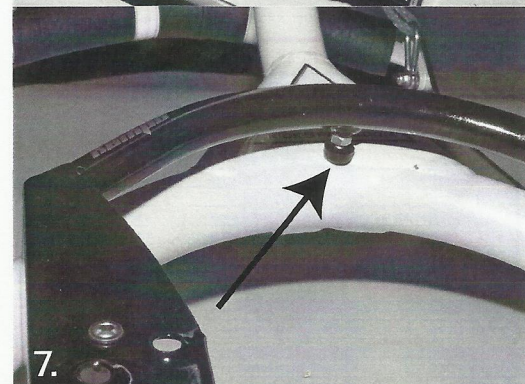

5.

Double Brake has one (1) year warranty for material and workmanship. The warranty does not cover wear and tear, corrosion, color changes, misuse or harm purposely made to the product.